









Michał Piekar Inżynieria
ul. Brzeziny 43
44-337 Jastrzębie-Zdrój
NIP: 6332219909 REGON: 360956627

tel. +48 506204080
e-mail: michal.piekar@advalp.pl
web: advalp.pl

00119

Poszerzenie stopki BMW R1150RT Instrukcja instalacji

Zestaw zawiera:

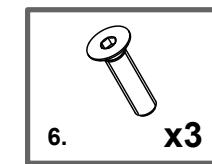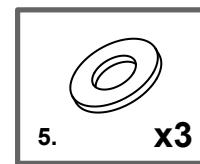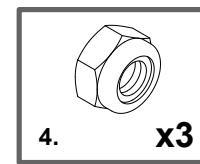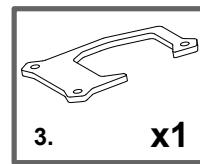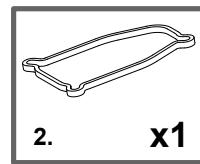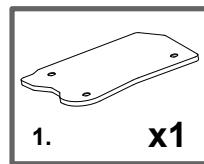


BMW R1150RT side stand extension Installation manual

Set includes:

- Przełóż przez otwory w płytce dolnej (1) trzy śruby (6) i nałożź na nie płytę środkową (2).
- Umieść stopkę boczną w gnieździe powstały z płytka środkowej (2) i dolnej (1).
- Nałożź na góre podstawy stopki płytę górną (3).
- Na śruby (6) wystające nad płytę górną (2) nałożź podkładki (5), a następnie skręć połączenia nakrętkami (4) używając momentu 2,5 Nm.

- Pass through the holes in the bottom plate (1) the three screws (6) and put on them the middle plate (2) from the top.
- Place the side stand in the slot resulting from the middle plate (2) and the lower plate (1)
- Apply the top of the foot base, a top plate (2).
- Apply the washers (5) to the screws (6) projecting on the top plate (2) and screw connection with the nuts (4) using a torque of 2.5 Nm (1.8 lb-ft).

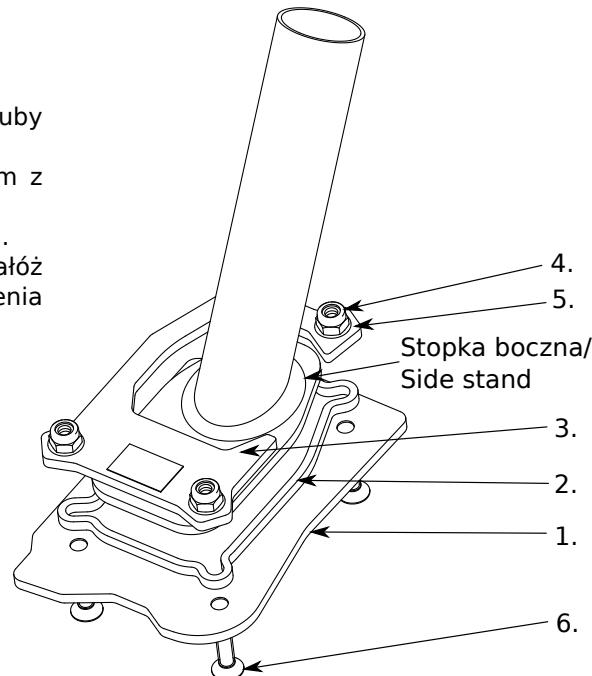

Po przejechaniu pierwszych 50km sprawdź
czy wszystkie połączenia gwintowe są dokręcone
właściwym momentem.

M4 2,5 Nm 1.8 lb-ft

After the first 50 km, check that all threaded
connections are tightened to the correct torque.