



Michał Piekar Inżynieria
ul. Brzeziny 43
44-337 Jastrzębie-Zdrój
NIP: 6332219909 REGON: 360956627

tel. +48 506204080
e-mail: michal.piekar@advalp.pl
web: advalp.pl

00031


Deflektor uniwersalny 2D

Instrukcja instalacji

Zestaw zawiera:


- 1. Szyba - x1
- 2. Gniazdo szyby - x1
- 3. Uchwyty mocujące - x2

1. Rozkręć śruby dociskowe (a.) tak, by możliwe było rozsuniecie ramion uchwyty (b.) i nałożenie ich na szybę motocykla.
2. Przyłóż mocowania do szyby tak, by gumowe podkładki (c.) obcisnęły szybę z dwóch stron, a następnie dokręć śruby dociskowe (a.) na tyle mocno, by deflektor nie przemieszczał się po szybie.

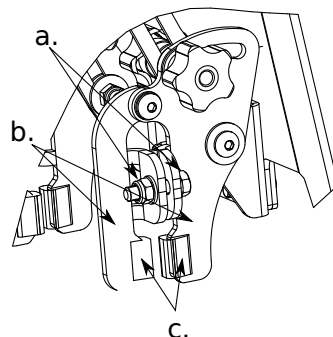

Instrukcja regulacji

1. Rozkręć nieco pokrętła regulacyjne (1 i 2).
2. Ustaw szybę w pożądanym położeniu.
3. Dokręć pokrętła regulacyjne.

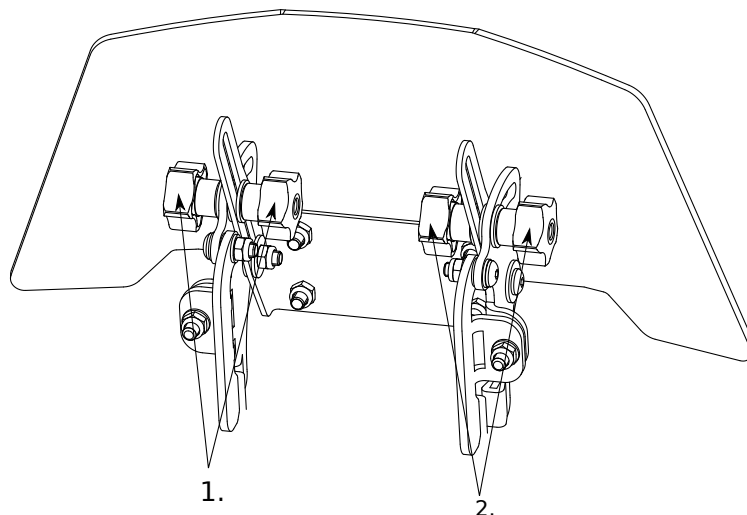

Universal wind deflector

Instalation manual

Set includes:

- 1. Windscreen - x1
- 2. Screen slot - x1
- 3. Clampings - x2

1. Unscrew the screws (a.), to make it possible to move apart the arms of the clampings (b.) and applying them on the motorcycle screen.
2. Put clampings to the motorcycle screen so that the rubber washers (c.) compress the screen on both sides and tighten the screws (a.) enough hard to the deflector does not move on the motorcycle screen.

Adjustment manual

1. Slightly unscrew the adjustment knobs (1 and 2).
2. Place the deflector windscreen in position you want.
3. Tighten the adjustment knobs.