



Advalp Michał Piekar
ul. Brzeziny 41
44-337 Jastrzębie-Zdrój, Poland
NIP: 6332219909 REGON: 360956627






tel. +48 506204080
e-mail: biuro@advalp.pl
web: https://advalp.pl

00156
rev.2


Poszerzenie stopki Honda NC700 NC750

Instrukcja instalacji

Zestaw zawiera:

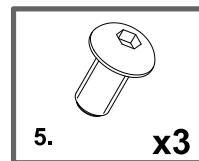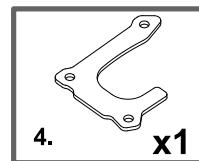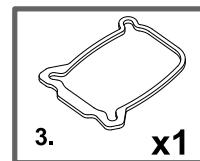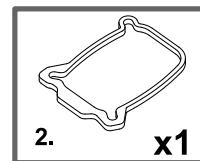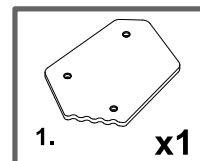

1. Złącz płytę dolną (1) i płytki środkowe (2) i (3) tak aby ich otwory pokryły się.
2. Umieść stopkę boczną w gnieździe powstającym z płytka środkowych (2) i (3) oraz płytka dolnej (1).
3. Nałożyć na góre podstawy stopki płytę górną (4) tak aby otwory w trzech płytach pokrywały się.
- 4.* Opcjonalnie nanieś na koniec gwintu każdej ze śrub (5) niewielką ilość kleju do gwintów.
5. Wkręć śruby (5) w otwory w płytach używając momentu 2,5 Nm.

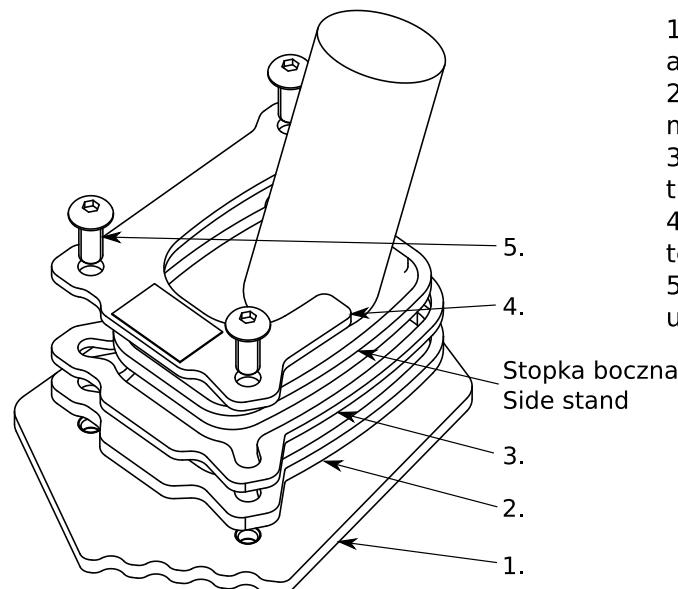

Honda NC700 NC750 side stand extension

Installation manual

Set includes:

1. Connect the bottom plate (1) and middle plates (2) and (3) so that their holes match.
2. Place the side stand in the socket formed from the middle plates (2) and (3) and bottom plate (1).
3. Attach the top plate (4) to the top of the foot base so that the holes in the three plates overlap.
- 4.* Optionally apply a small amount of thread adhesive to the end of the threads of each screw (5).
5. Tighten the screws (5) into the holes in the plates using 2.5 Nm. (1.8 lb-ft).

Po przejechaniu pierwszych 50km sprawdź czy wszystkie połączenia gwintowe są dokręcone właściwym momentem.

M4 2,5 Nm 1.8 lb-ft

After the first 50 km, check that all threaded connections are tightened to the correct torque.